


3" Square Fluted Column/Post

INSTALLATION INSTRUCTIONS


1. Measure the height of the opening where the column/post will be placed. Subtract 3/8" from this measurement (to allow for the bracket spacing) and cut the post to length. **Note: A circular saw with a metal cutting blade is recommended for cutting the staves.**

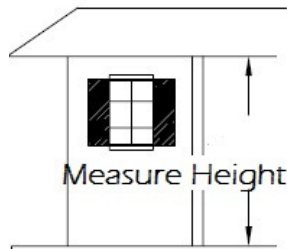

2. To assemble the column/post, insert the (2) brackets included, into the each end of the post making sure they are fully inserted, and position the column/post in the correct location to be installed.



3. To secure the column/post, attach the brackets to the overhead structure as well as the floor with the appropriate fasteners (*not included*) required for the application. Mounting holes are provided in the brackets to locate fasteners (2ea. on the top and bottom required). Install two fasteners (included) each at the top and bottom of the column/post securing the column/post to the brackets through the wall of the post and securing to the tab of the bracket inserted in the column/post.

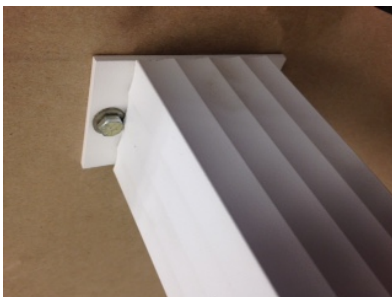

Notes:

- a. All column/post staves should be cut square.
- b. Installation should be on a smooth level surface.
- c. 2nd story balconies should not be attached directly to the side of any column.
- d. Columns should be installed according to standard construction practices and in compliance with applicable local, state, and federal regulations.